

Bonnaire TWS User Manual 真無線耳機用戶手冊


DM-360

Index

- a) Microphone 1/麥克風1
- b) Microphone 2/麥克風2
- c) Touch Control - multi-function button (MFB)/
觸控- 多功能按鈕(MFB)
- d) Type C USB Charging Port/ Type C充電端口
- e) Light Indicator of Earbud/耳機指示燈
- f) Battery Indicator of Charging Compartment
充電倉電量指示

Inside the package 包裝內:

1. DM-360 earbuds and charging case 耳機+充電盒
2. Type C USB Charging Cable 充電線

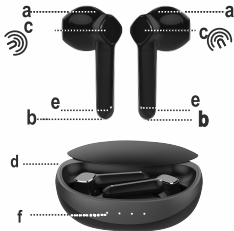

- 1 Put gently the earbud into your ear and swirl slightly to a comfortable wearing angle.
- 2 Bluetooth pairing :
 - 2.1 Turn on the earbuds: Take out earbuds from charging case, they will automatically be awakened. (given that the charging case has battery to charge the earbud).
 - 2.2 Turn on the earbuds: If the earbuds are already outside the charging case and they are in off state, press MFB continuously for 3 seconds to wake them up.
 - 2.3 When the earbuds are turned on, voice prompt is "Power On". White light then flashes with a maximum of ~20sec for L & R earbuds to pair together, followed by either one flashing in white light meaning that the earbuds are ready to pair with your mobile phone (Bluetooth device).
 - 2.4 Enable the Bluetooth function of your mobile phone (Bluetooth device), search for DM-360, and Connect.
 - 2.4.1 The pairing time of DM-360 is ~5 minutes per time with your phone/ bluetooth device. If time elapses, you have to repeat steps in Bullet 2.1 to 2.4 above again.
 - 2.5 The last paired device will be automatically re-connected with the earbuds within 5 minutes if they are apart. Earbuds will be off to save energy after these 5 min idle time.
 - 2.6 Turn off the earbuds :
 - 2.6.1 Earbuds will be off after they are putting back to the charging box, or manually press MFB for 5" of either side to power off.
- 3 Phone Call
 - 3.1 Answering Call: Double Click MFB of any earbud to answer a call.
 - 3.2 Call Hang Up: Double Click MFB of any earbud to end a call.

- 3.3 Reject Call: Long Press MFB for 2 sec while there is an incoming call.
- 4 Siri – On by long press MFB for 1.5 sec when it is connected with phone; press 1.5 sec again to turn off.
- 5 Music Playing :
 - 5.1 Play/ Pause : Press MFB twice while phone/ bluetooth device is in music play mode.
 - 5.2 Play Last Song: Click L side earbud MFB for 4 times to play last song.
 - 5.3 Play Next Song: Click R side earbud MFB for 4 times to play next song.
 - 5.4 Volume Adjustment: Press R or L for increasing (+) or decreasing (–) volume respectively.
- 6 Battery Charging
 - 6.1 Case : The case LED will flash white light when Type C charging cable is plugged-in. Number of lights 1/2/3/4 would represent 25%/ 50%/ 75%/ 100% charged.
 - 6.2 Earbuds: Simply put back earbuds to charging case slot for powering up by the case battery.
- 7. Mono Mode :
 - 7.1 Take out either side earbud which will be paired to your phone automatically (if stereo have been paired prior) whilst another earbud stays inside the battery case.
 - 7.2 Mono and stereo mode switching: When mono mode is in use, simply get the remaining earbud from the charging case which will automatically be paired to perform stereo sound. After that, either side to put back to the charging case, the remaining earbud will resume mono mode again. Mono or stereo mode are applicable to phone calling and music playing.

- 8 Reset to Factory Defaults :
- 8.1 When earbuds fail to pair together to deliver stereo sound, you may reset them to factory defaults.
- 8.2 Disconnect earbuds with phone/ Bluetooth device, then, earbuds are in state of pairing mode with phone.
- 8.3 Put back one earbud into the charging case, and 5 clicks MFB on another one.
- 8.4 Repeat the process of 8.3 for the remaining earbud. Upon finished, put back the earbud into the case.
- 8.5 By now, the 2 earbuds have cleared all prior data and reset to factory defaults.
- 8.6 Take both of them out from the charging case for launching a new pairing with the phone/ bluetooth device. (see Bullet 2.4-2.5)
- 9 Low Battery Alert: Voice prompt "Battery Low" will be heard and it will be off by itself when it runs out of the battery.
- 10 Earbud Battery Level Indication on Phone¹: Please check your phone specifications if it would support this feature.

Remark:

1- Operation requires support by your mobile manufacturer / service operator. In other words, such operation would be disabled in your device which are not under our control. Please consult your mobile manufacturer/ service operator, if necessary.

- 1 耳機佩戴：將耳機輕輕放入您的外耳道並旋轉至一個舒適的角度。
- 2 藍牙配對：
 - 2.1 開啟耳機：從充電盒中取出耳機，耳機會自動喚醒。(假設充電盒有電為耳機充電)。
 - 2.2 開啟耳機：如果耳機已經在充電盒外且處於關機狀態，長按MFB 3"即可喚醒。
 - 2.3 耳機開機後，語音提示 Power On。然後白光最多閃爍約 20 秒，以便L和R耳機配對在一起，然後其中一個以白光閃爍，表示耳機已準備好與您的手機(藍牙設備)配對。
 - 2.4 開啟手機(藍牙設備)的藍牙功能。搜索DM-360，連接。
DM-360 的藍牙配對時間約為每次5分鐘。如果時間過去了，您必須再次重複以上步驟2.1-2.4。
 - 2.5 耳機與手機(藍牙設備)短暫分離5分鐘內，可自動重連。在這5分鐘的閒置時間後，耳機將關閉以節省能源。
 - 2.6 關閉耳機：耳機放入充電盒，耳機會自動關機，或長按MFB 5"關機。
- 3 電話接聽
 - 3.1 接聽電話：雙擊任何一只耳機的MFB接聽電話。
 - 3.2 通話掛斷：雙擊任何一只耳機的MFB結束通話。
 - 3.3 拒接電話：有來電時長按MFB 2"。

- 4 Siri - 耳機與手機配對後，長按 MFB 1.5*激活/關閉Siri .
- 5 音樂播放：
 - 5.1 播放/暫停：在手機/藍牙設備處於音樂功能時按兩次MFB.
 - 5.2 播放上一曲：四擊L耳機MFB 播放上一曲.
 - 5.3 播放下一曲：四擊R耳機MFB 播放下一曲.
 - 5.4 音量調節：MFB按 R 耳機增大(+)或L減小(-)音量.
- 6 充電
 - 6.1 充電盒：插入Type C充電線時，充電盒LED會閃爍白光。燈數量1/2/3/4表示已充電25%/50%/75%/100%。充滿電後，燈會持續亮.
 - 6.2 耳機：只需將耳機放入充電盒，充電盒(如果它有電)即可為其充電.
- 7 單聲道模式：
 - 7.1 只需取出任何一只耳機(如果之前已配對立體聲)，同時另一個耳機保留電池盒內.
 - 7.2 單聲道和立體聲模式切換：在使用單聲道模式時，只需從充電盒中取出剩餘的耳機，它會自動配對播放立體聲.之後，將一只放入充電盒，另一只將再次切換到單聲道模式.單聲/立體聲模式適用通話/音樂播放.

8 重置為出廠默認值：

8.1 斷開耳機與手機/藍牙設備的連接，耳機與手機處於配對狀態。將一只耳機放回充電盒中，然後在另一只耳機上單擊 5 次MFB。然後，將此耳機放回充電盒，把另一只耳機取出並單擊 5 次MFB。再放回盒中。此時，一雙耳機已清除所有之前的數據並重置為出廠默認設置。將它們從充電盒中取出，以啟動與手機/藍牙設備的重新配對。（見步驟2.4-2.5）

9 低電量提示：耳機語音提示“Low Battery”，電量耗盡時自動關機。

10 耳機電池電量顯示：某些手機會顯示耳機電池電量，請查看您的手機規格。

備注：

1- 操作需要您的手機製造商/網絡運營商支持。換句話說，您的設備可能不支援此類操作，這是此產品控制範圍能力以外。請諮詢您的手機製造商/網絡運營商。

Warning: Using loud volume for a prolonged time frame would damage your hearing ability; Must comply to road safety regulation whilst you are using Bluetooth headset; Earbuds are not toys, and must keep them away from kids;

Reminder: Keep the product away from water and moisture as the product is not water resistant; Keep the product in normal room temperature; Use the original USB cable from the package to charge the product.

警告：長時間使用大音量會損害您的聽力；使用藍牙耳機時必須遵守道路安全法規。產品不是玩具，遠離幼童，慎防誤吞。提醒：由於產品不防水，請讓產品遠離水和濕氣。將產品保持在正常室溫環境。請使用包裝內的原裝 USB 線為產品充電。



Product Warranty Card

保養卡

To guarantee our service to you, please keep this card with the original invoice from an authorized dealer for a carry-in 12-month limited warranty of the functional performance of the core unit. 為保證我們為您提供保養服務，請將此卡與授權經銷商的正本發票一起保存，以獲得功能上的 12 個月有限保修。

Latest version of user manual would be downloaded from www.bonnaireproducts.com or your local distributor's website.
最新版本的用戶手冊可從 www.bonnaireproducts.com 或您當地經銷商的網站下載。